

# ***MCS-NitroMag-Keypads***

## **QUICK START**

Version 1.1



***MCS-NitroMag-OEM***  
***MCS-NitroMag-DOOR***  
***MCS-NitroMag-DOOR-NEMA***  
***MCS-NitroMag-PANEL***

*MCS-NITROMAG OPERATING SYSTEM 1.2.4 AND UP*



**MCS-NitroMag-DOOR**



**MCS-NitroMag-PANEL**



**MCS-NitroMag-DOOR-NEMA4**



5580 Enterprise Parkway / Fort Myers, FL 33905 / Phone: 239-694-0089  
[www.mcsccontrols.com](http://www.mcsccontrols.com)

March 4, 2025 4:07 PM

**Introducing the latest additions to our product lineup. There are six basic versions of the MCS-NITROMAG each will need to connect to an MCS Expansion Board to complete the system.**

- **MCS-NITROMAG-N**
- **MCS-NITROMAG-15.4**
- **MCS-OEM-** (MCS-NITROMAG and Keypad)
- **MCS-NITROMAG-DOOR** (MCS-NITROMAG and Keypad)
- **MCS-NITROMAG-DOOR-NEMA4** (MCS-NITROMAG and Keypad)
- **MCS-NITROMAG-PANEL** (MCS-NITROMAG and Keypad)

## **MCS-NitroMag - Microprocessor @ 1.5GHz**

These advanced units communicate seamlessly at 38,400 baud over the dedicated MCS-I/O port, ensuring efficient and reliable performance.

Get ready to elevate your control systems like never before!

Maximum of 144 SI inputs, 90 RO outputs, and 36 AO outputs. (Expansion boards required).

- Built in WiFi - 2.4 GHz, 5.0 GHz.
- 2 HDMI ports (1 Standard & 1 Micro).
- Two user defined RS-485 Ports up to 115200 baud rate.
- Ethernet -10Mbps/100Mbps/1Gbps.
- Supports BACnet IP, BACnet MSTP, Modbus IP, Modbus RTU slave.
- MCS-BMS Gateway no longer required (except Lontalk and N2).
- NEMA4/IP66 Keypad or Touchscreen available.
- Modbus RTU Master - Supports up to 10 Modbus devices e.g., VFD's KW Meter, Compressors. (MCS-Modbus I/O no longer required).

TABLE OF CONTENTS

TABLE OF CONTENTS .....3

MCS-NITROMAG-N CONTOLLER.....4

MCS-NITROMAG-KEYPAD INSTALLATION .....5

LOADING SOFTWARE - FIRMWARE, CONFIG, KEYPAD .....9

USING THE KEYPAD AND DISPLAY SCREENS .....13

WIFI SETUP .....27

BACKUP / RESTORE FILES USING USB DRIVE.....29

MAIN MENU FUNCTION KEYS .....32

AUTHORIZATION FUNCTION.....33

# MCS-NITROMAG-N CONTROLLER


## 1. About the MCS-NITROMAG-N

The MCS-NITROMAG-N is a rugged microprocessor controller designed for the harsh environment of the HVAC/R industry. It is designed to provide primary control without needing mechanical controls. It will interface locally with a null modem serial cable, remotely through an Ethernet connection, and also through building management systems. The MCS-NITROMAG-N offers a great deal of flexibility with adjustable setpoints and control options that can be set prior to activating a system or even when the unit is operational. The MCS-NITROMAG-N is designed to safeguard the system being controlled, minimize the need for manual intervention, and to provide a simple but meaningful user interface.

MCS-Connect provides both local and remote communications to the MCS-NITROMAG-N, independent of software type. Local communications can be either through an RS485 or Ethernet connection. This program displays the status of the controller, and changes can be made to the system with proper authorization.

Configuration files can be transmitted to or received from a MCS-NITROMAG-N unit. The MCS-NITROMAG-N automatically performs history logging and this program allows the data to be presented in a useful graph form. A manual created in a PDF format is available on our web site:

***www.mcsccontrols.com, or available in other formats upon request.***

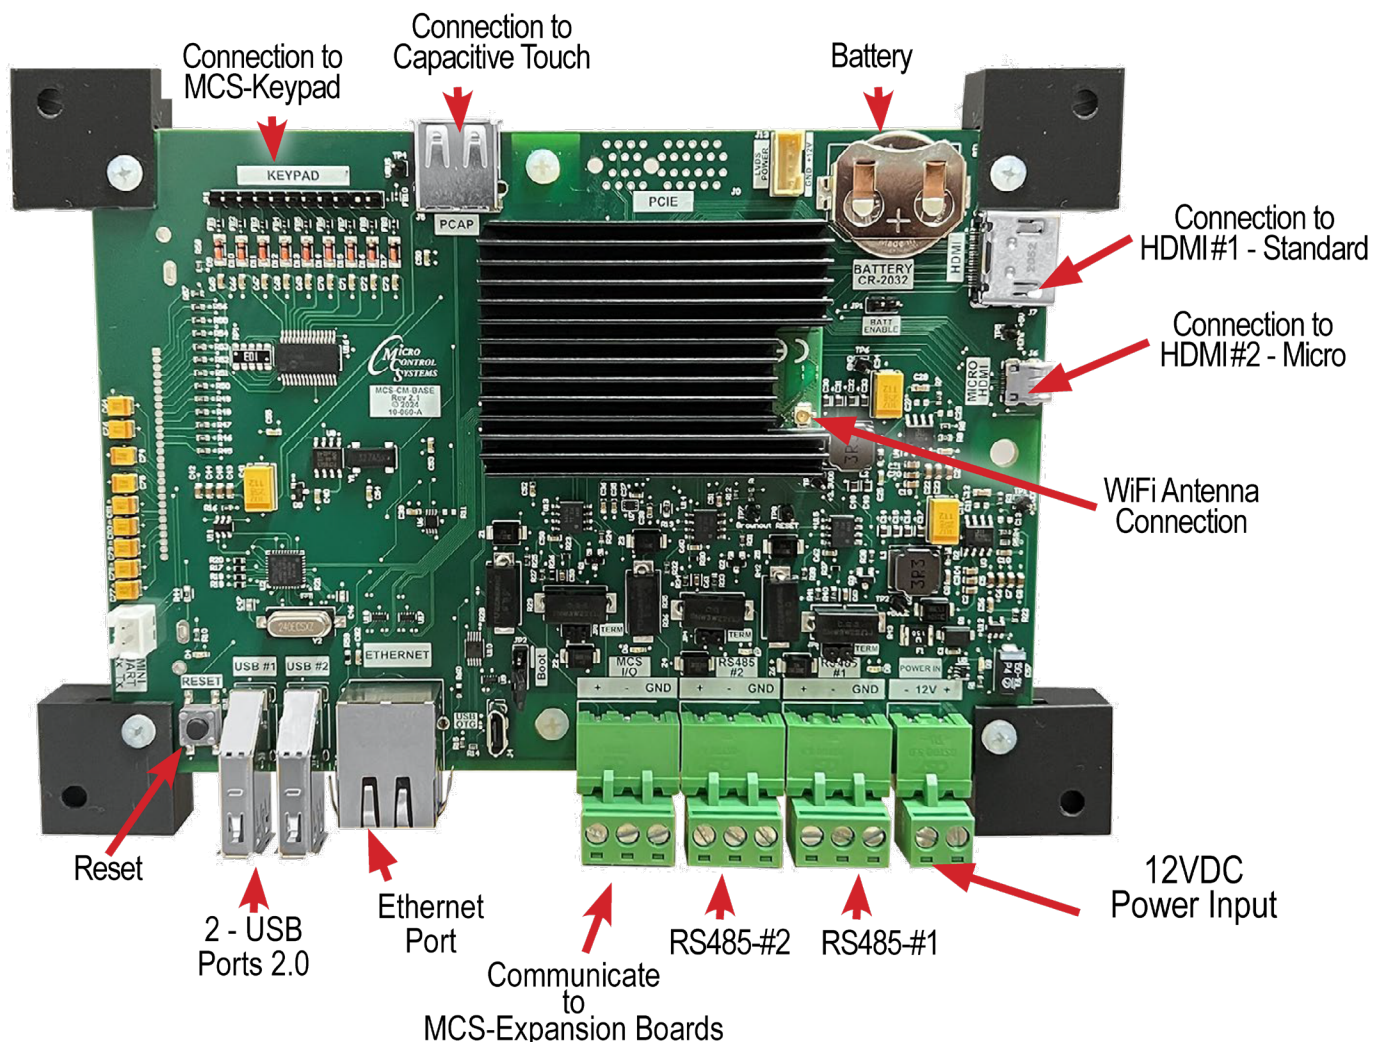

\*Shown with mounting feet.



# MCS-NITROMAG-KEYPAD INSTALLATION

**NITROMAG KEYPAD OPERATION SYSTEM - REV 1.2.4 & up**

**NITROMAG HVAC FIRMWARE - REV 19.00E & up**

## 2. MCS-NITROMAG-OEM

The **MCS-NitroMag-OEM** is a control system containing a Keypad, a processor, memory, eMMC Flash, and supporting power circuitry. The Broadcom quad-core processor delivers a blazing speed of 1.5GB.

The MCS-NitroMag-OEM features an easy-to-use keypad with three function keys, four directions keys and two selection keys (Menu & Enter).

The display LCD is 128 x 64 dot pixel graphics, 2.8" diagonal viewing area with White characters on a dark background (reversible). Includes a NEMA Type 1 faceplate for easy mounting to an enclosure door.



### 2.1. MOUNTING

- Template mount and wiring instructions with shipment.
- 8 pre-drilled holes for mounting
- Connection to MCS EXPANSION BOARDS using MCS-I/O Comm Port.

## 3. MCS-NITROMAG-DOOR

The MCS-NitroMag-DOOR is a control system containing a Keypad, a processor, memory, eMMC Flash, and supporting power circuitry. The Broadcom quad-core processor delivers a blazing speed of 1.5GB.

Includes a NEMA Type 1 faceplate for easy mounting to an enclosure door.

The Keypad is identical as the MCS-NITROMAG-OEM with the same features as explained above.



### 3.1. MOUNTING

- Template mount and wiring instructions with shipment.
- Mounts using supplied #6-32 Kep nut
- Connection to MCS EXPANSION BOARDS using MCS-I/O Comm Port.


## 4. MCS-NITROMAG-DOOR-NEMA

The MCS-NitroMag-DOOR-NEMA4 has been sealed in its own frame using a new Gasket (HT-800 Medium Cellular Silicone). It features an easy-to-use keypad with three function keys, four directions keys and two selection keys (Menu & Enter).

The Keypad is identical as the MCS-NITROMAG-OEM with the same features as explained above.

### 4.1. MOUNTING

- Template mount and wiring instructions with shipment.
- Mounts using supplied #6-32 Kep nut
- Connection to MCS EXPANSION BOARDS using MCS-I/O Comm Port.

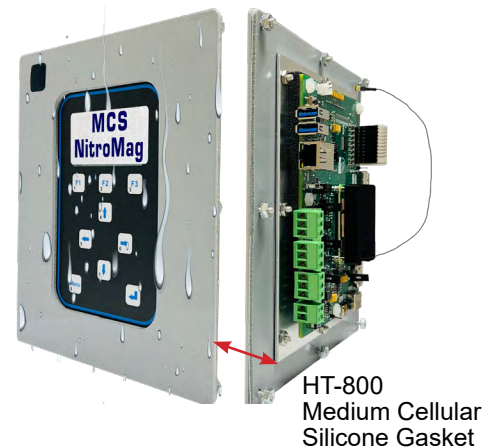

## 5. MCS-NITROMAG-PANEL

The MCS-NitroMag-PANEL is a control system containing a Keypad, a processor, memory, eMMC Flash, and supporting power circuitry. The Broadcom quad-core processor delivers a blazing speed of 1.5GB.

The Keypad is identical as the MCS-NITROMAG-OEM with the same features as explained above.

### 5.1. MOUNTING

- Template mount and wiring instructions with shipment.
- Mounts on a backplane using four #6 (6-32) sheet metal screws.
- Connection to MCS EXPANSION BOARDS using MCS-I/O Comm Port.




## 6. ELECTRICAL/COMMUNICATION WIRING - MCS-NITROMAG-N




NOTE: ALL 12V WIRING MUST BE 18 GAUGE MINIMUM.

- Wiring shows connection to MCS-IO-BASE expansion board using MCS I/O communication at 38,400 baud.
- Power is supplied by 12v-90w (MCS-12V-90w) to MCS-NITROMAG-15.4 and MCS-IO-BASE expansion board.
- Optional MCS-ETHERNAT-SWITCH-B shown.

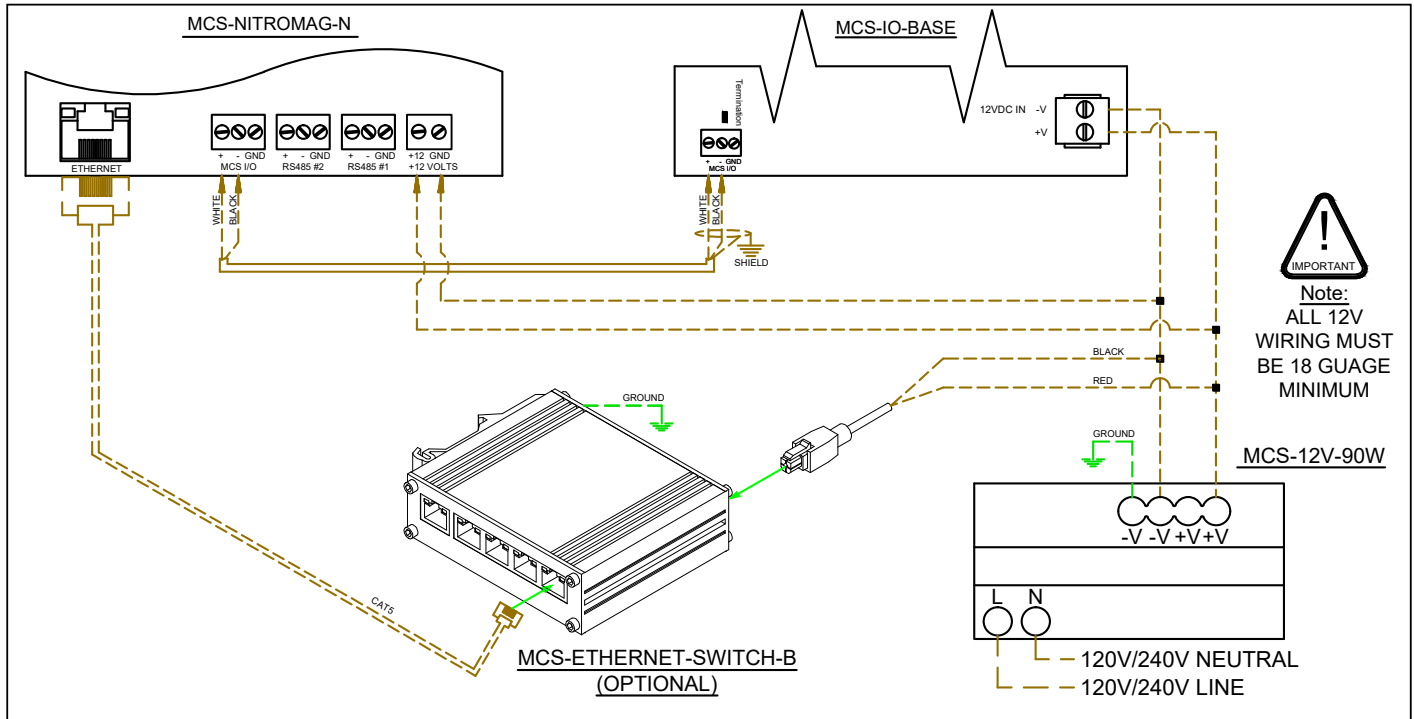


## 7. RS485 WIRING - MCS-NITROMAG-N

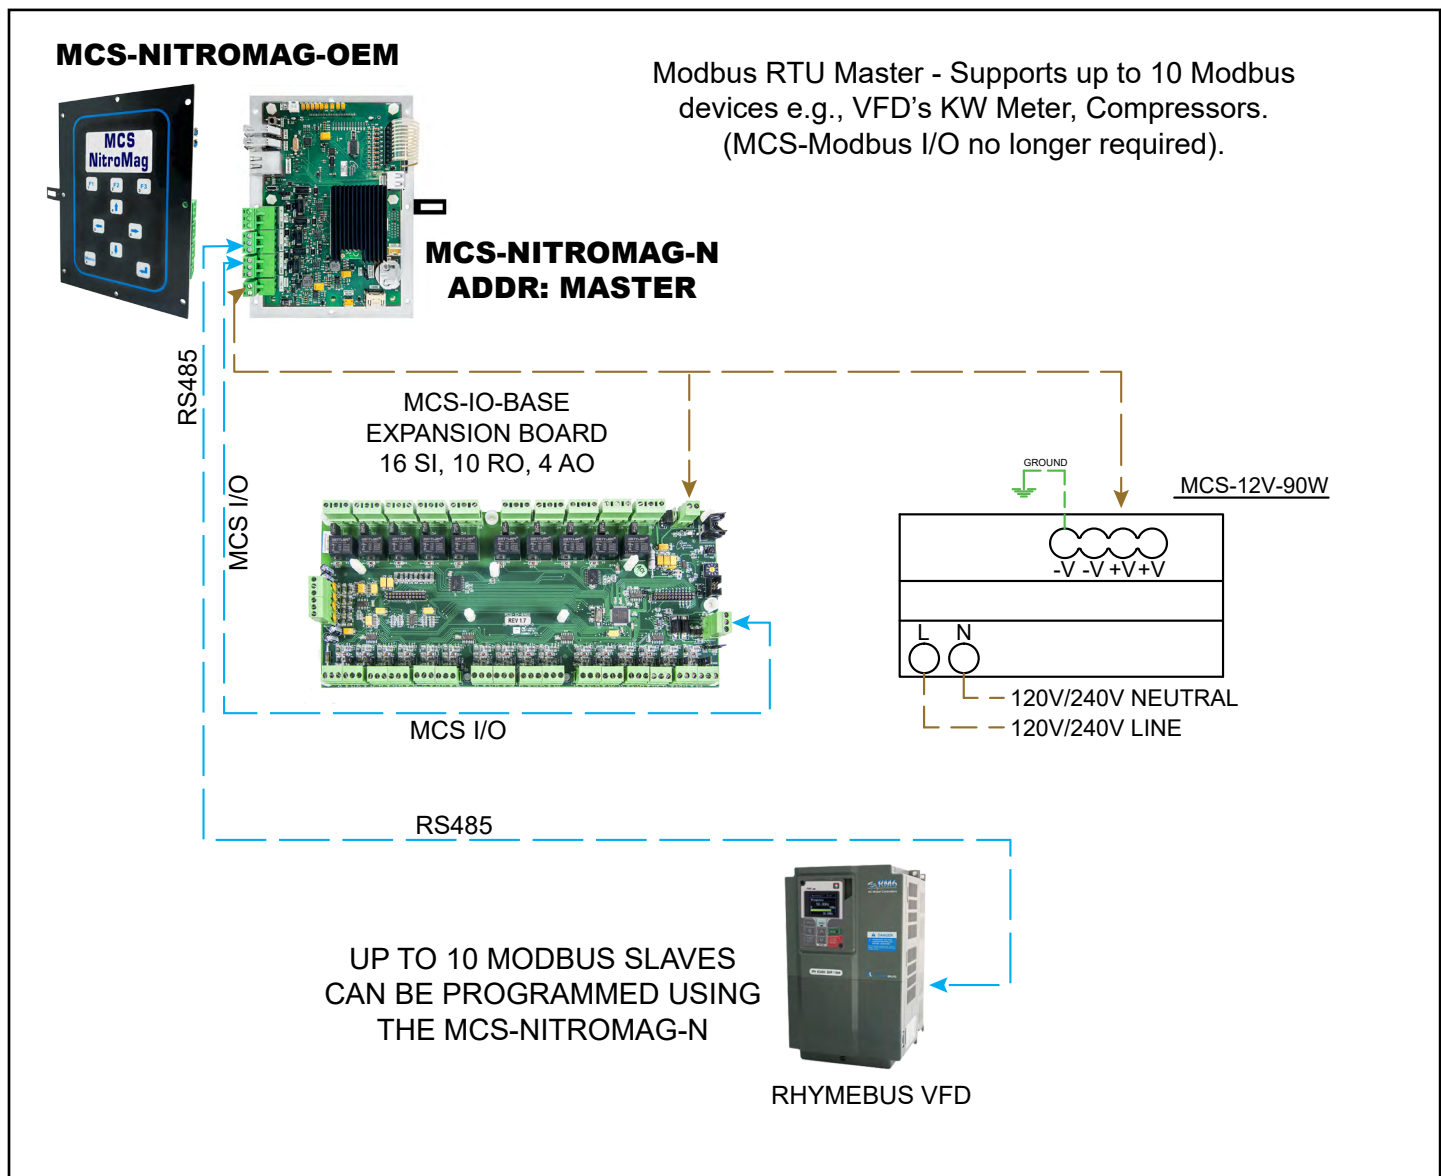



LOADING SOFTWARE - FIRMWARE, CONFIG, KEYPAD


1. Loading Keypad Software

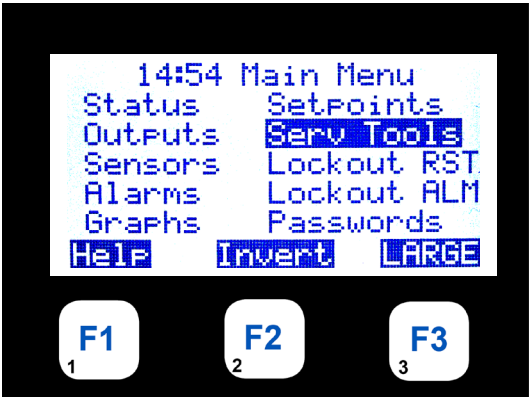

DESCRIPTION


HH:MM                      MAIN MENU  
MENU KEY, SELECT SERV TOOLS, PRESS (↵) ENTER  
THIS WILL ALLOW USER TO DISPLAY  
DETAILS OF SERV TOOLS  
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE  
DATA FUNCTION  
KEY F1 ALLOWS THE USER TO ACCESS HELP MENU  
PRESS ← MENU TO RETURN TO MAIN MENU

2. USB ACCESS

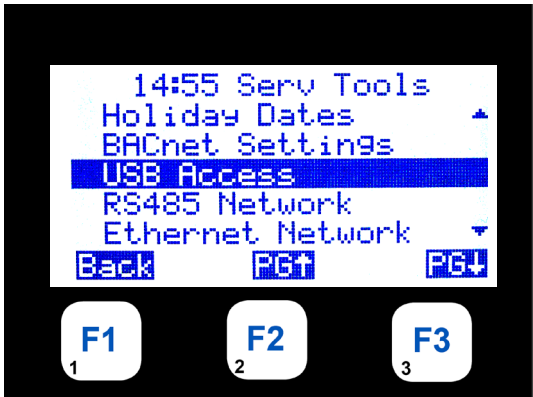

HH:MM                      SERV TOOLS  
SELECT USB ACCESS, PRESS (↵) ENTER  
THIS WILL ALLOW USER TO DISPLAY  
DETAILS OF USB ACCESS

3. MEDIA/USB DISKCONFIGS

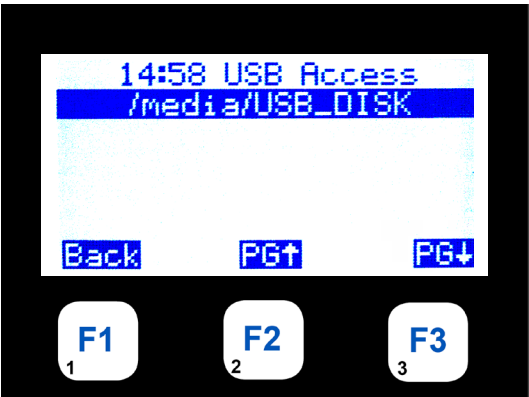


HH:MM                      USB ACCESS  
SELECT /MEDIA/USB\_DISK, PRESS (↵) ENTER  
THIS WILL ALLOW USER TO DISPLAY  
DETAILS OF MEDIA ON USB DISK

#### 4. Loading Config file




HH:MM                      USB ACCESS  
SELECT CONFIGS, PRESS (↵) ENTER  
THIS WILL ALLOW USER TO DISPLAY  
DETAILS OF CONFIG FILE ON USB DISK  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

#### 5. Config File Found

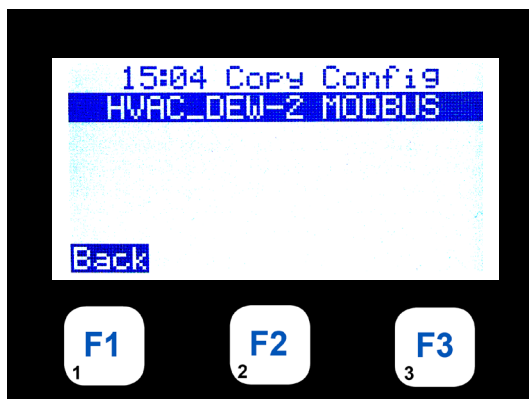

HH:MM                      COPY CONFIG  
SELECT CONFIG FILES, PRESS (↵) ENTER  
  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

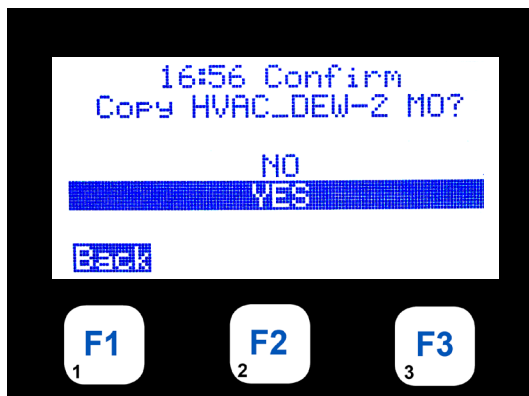


HH:MM                      CONFIRM  
SELECT NO / YES, PRESS (↵) ENTER  
LOADING NEW CONFIG FILE  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

#### 6. Hex Files (Firmware HVAC, ETC)



HH:MM                      USB ACCESS  
SELECT HEX FILES, PRESS (↵) ENTER  
LOADING NEW HEX / FIRMWARE FILE  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

## 7. No Valid Files found

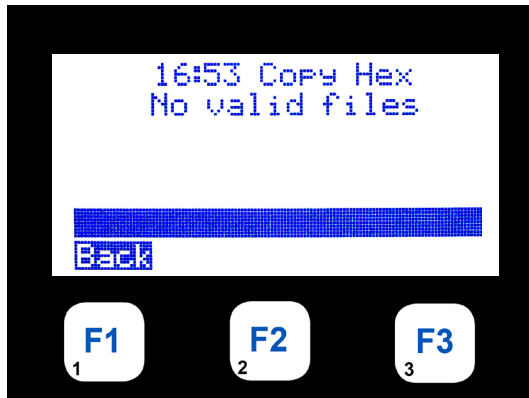


HH:MM COPY HEX  
NO VALID FILES  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU




HH:MM USB ACCESS  
SELECT HEX FILES, PRESS (↵) ENTER  
LOADING NEW HEX/FIRMWARE FILE  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

## 8. Valid Hex File Found

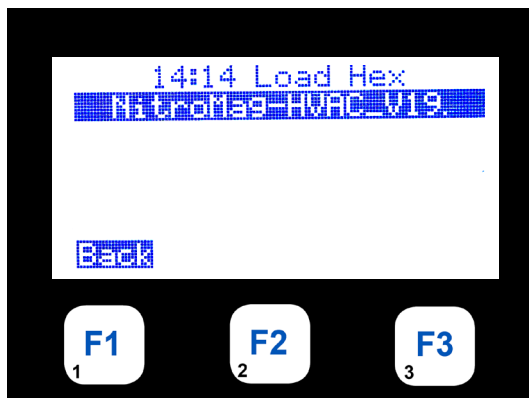

HH:MM COPY HEX  
SELECT HEX FILE, PRESS (↵) ENTER  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

## 9. Select Hex file - Loading New Hex File

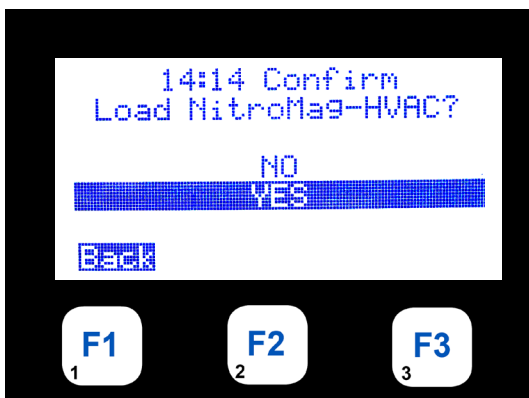


HH:MM CONFIRM  
SELECT NO / YES, PRESS (↵) ENTER  
LOADING NEW HEX FILE  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

**10. USB Access**


HH:MM USB ACCESS  
SELECT HKEYPAD INSTALLERS  
FILES, PRESS (←) ENTER  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

**11. Keypad Installers**

HH:MM USB ACCESS  
KEYPAD INSTALLERS  
FILES, PRESS (←) ENTER  
LOADING NEW KEYPAD INSTALLERS FILE  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

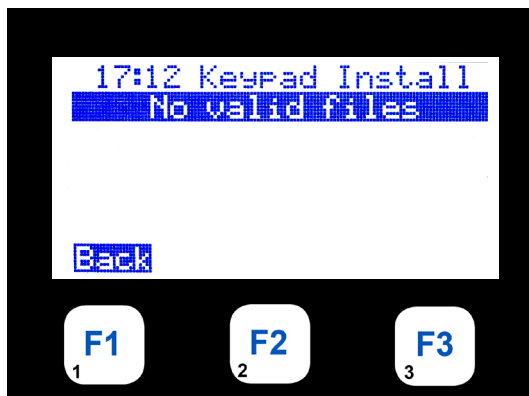**12. No Valid Files Found**

HH:MM KEYPAD INSTALL  
NO VALID FILES  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU

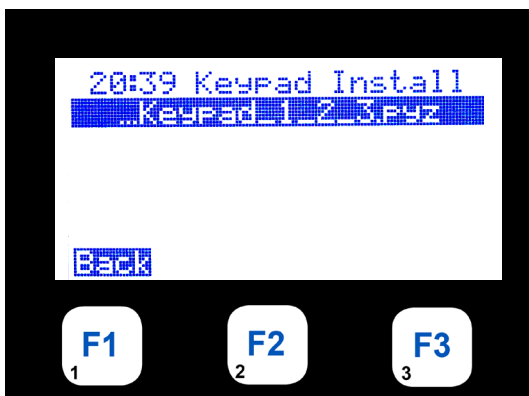**13. Valid Keypad File Found**

HH:MM KEYPAD INSTALL  
FILES, PRESS (←) ENTER  
LOADING NEW KEYPAD INSTALLERS FILE  
KEY F1 ALLOWS THE USER GO BACK TO USB ACCESS MENU




USING THE KEYPAD AND DISPLAY SCREENS

The display screens shown on the following pages show a configuration setup for an HVAC system using two screw compressors. For purpose of display, the sensors and relays are set to manual mode.

To reach the Main Menu press the Menu button after powering up. Based on the highlighted menu option when the enter key (↵) is pressed will bring up one of the following screens.

14. Menu Key - Pressing the ‘Menu’ key shows the following:

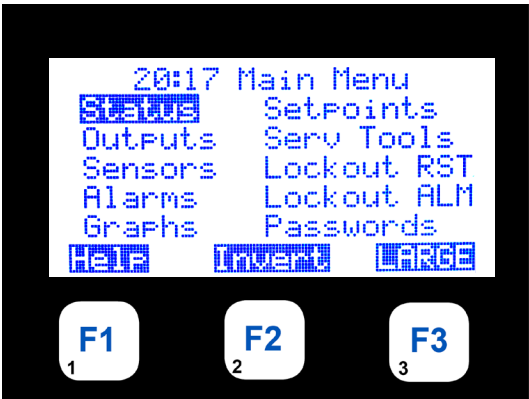


DESCRIPTION	
HH:MM	SCREEN TITLE
-CONTROL STATUS DISPLAY	-ACTIVE SETPOINTS DISPLAY
-RELAY/ANALOG DISPLAY	-SERVICE TOOLS DISPLAY
-SENSOR INPUT DISPLAY	-LOCKOUT RESET DISPLAY
-ALARM DISPLAY	-LOCKOUT ALARM DISPLAY
-GRAPHING DISPLAY	-PASSWORD DISPLAY
HELP	-LARGE


NOTE: Your Keypad LCD can be setup in your configuration file so that the LCD will continuously scroll the status of the controller you are monitoring. When a button is pressed, the LCD will stop scrolling and move to view that item. There will be a 15 minute pause before the Keypad LCD will start scrolling.

15. Status: Unit in Power up mode


Unit is powered up Run/Stop SW is off. Press F3 to see next screen:

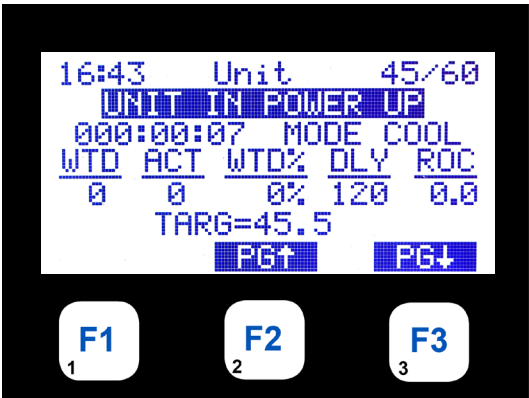

HH:MM	CHILLER UNIT		LEV/ENT	
UNIT IN POWER UP				
TIME IN CURRENT STATE				
<u>WANTED</u>	<u>ACTUAL</u>	<u>WANTED%</u>	<u>DELAY</u>	<u>SLOPE</u>
#STEPS	#STEPS	ACTUAL%	NEXT CHG	DIRECTION
TARGET SET POINT + TARGET RESET			PAGE DOWN↓	
			PAGE UP↑	

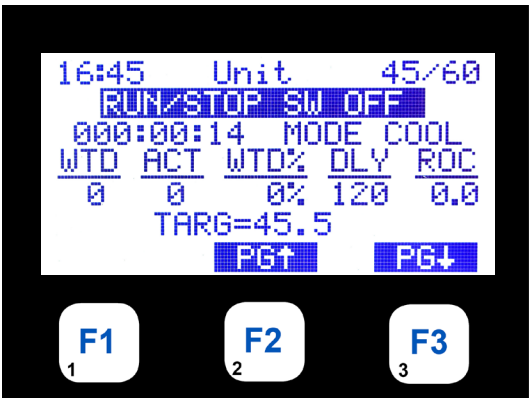


HH:MM	CHILLER UNIT		LEV/ENT	
RUN/STOP SW OFF				
TIME IN CURRENT STATE				
<u>WANTED</u>	<u>ACTUAL</u>	<u>WANTED%</u>	<u>DELAY</u>	<u>SLOPE</u>
#STEPS	#STEPS	ACTUAL%	NEXT CHG	DIRECTION
TARGET SET POINT + TARGET RESET			PAGE DOWN↓	
			PAGE UP↑	

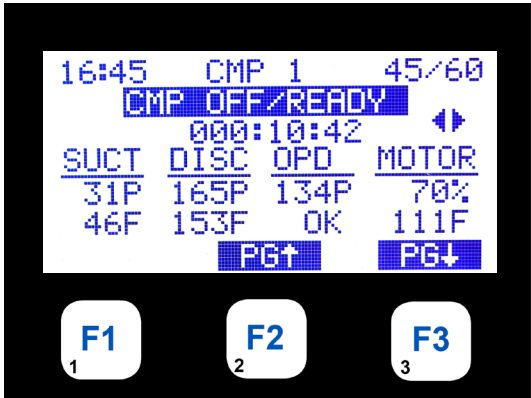


DESCRIPTION


HH:MM	CMP 1	LEV/ENT
CMP OFF/READY		
TIME IN CURRENT STATE		
SUCTION	DISCHARGE	OIL DIFFERENTIAL
PRESSURE	PRESSURE	PRESSURE
TEMP	TEMP	STATUS
	PAGE UP↑	PAGE DOWN↓
MOTOR		
		AMP %
		STATUS

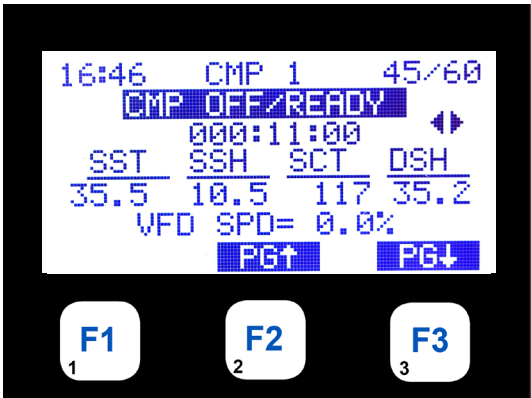

HH:MM	CMP 1	LEV/ENT
CURRENT CONTROL STATE		
TIME IN CURRENT STATE		
SAT.SUCT	SUCTS HEAT	SAT.COND.
TEMP	TEMP	TEMP
		DISC SHEAT
		TEMP
	PAGE UP↑	PAGE DOWN↓

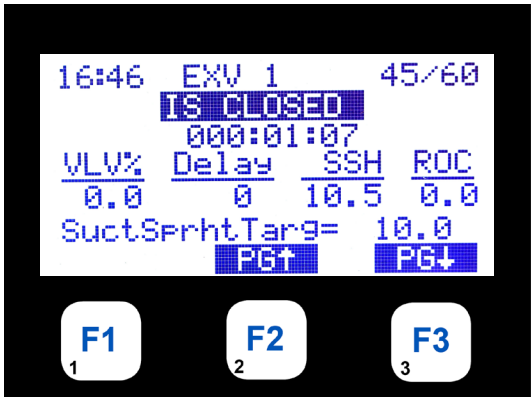


HH:MM	EXV 1 STATUS	LEV/ENT
	VALVE IS CLOSED	
	TIME IN THIS MODE	
	PROVIDES VALVE %, TIME TO NEXT CHANGE, SUPERHEAT & RATE OF CHANGE, PROVIDES CONTROL & TARGET	
	PAGE UP↑	PAGE DOWN↓

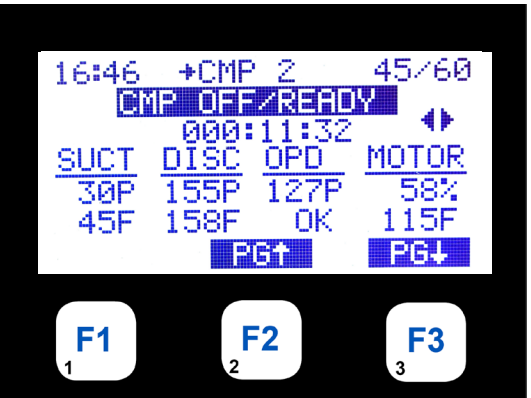


HH:MM	CMP 2	LEV/ENT
CMP OFF/READY		
TIME IN CURRENT STATE		
SUCTION	DISCHARGE	OIL DIFFERENTIAL
PRESSURE	PRESSURE	PRESSURE
TEMP	TEMP	STATUS
	PAGE UP↑	PAGE DOWN↓
MOTOR		
		AMP %
		STATUS

Pressing the Page Down F3 button shows the next Circuit Status screen:

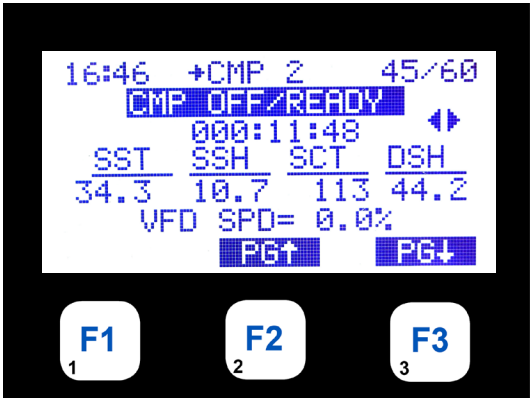


DESCRIPTION			
HH:MM	CIRCUIT		LEV/ENT
CURRENT CONTROL STATE			
TIME IN CURRENT STATE			
<u>SAT.SUCT.</u>	<u>SUCT SHEAT</u>	<u>SAT.COND.</u>	<u>DISC SHEAT</u>
TEMP	TEMP	TEMP	TEMP
PAGE UP↑		PAGE DOWN↓	

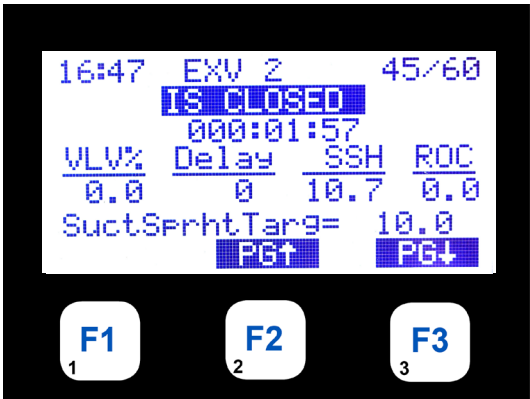


HH:MM	EXV 2 STATUS	LEV/ENT
OPENING EXV 2		
TIME IN THIS MODE		
PROVIDES VALVE %, TIME TO NEXT CHANGE, SUPERHEAT & RATE OF CHANGE, PROVIDES CONTROL & TARGET		
PAGE UP↑		PAGE DOWN↓

16. Outputs-Relays

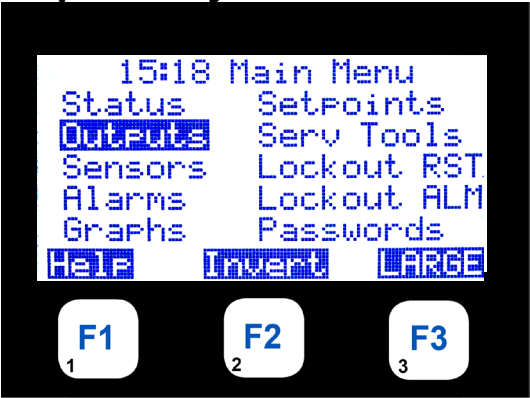


HH:MM	MAIN MENU
OUTPUTS	
PRESS MENU KEY TO VIEW OUTPUTS	
PRESS ↵ ENTER	

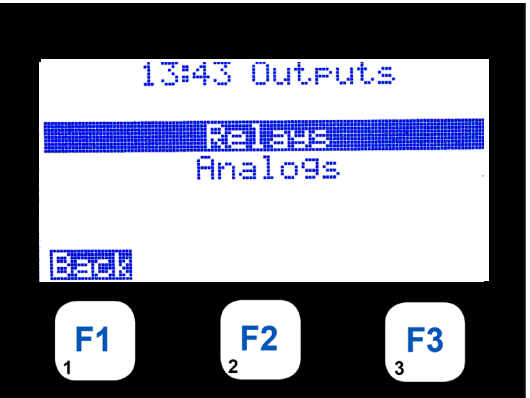

HH:MM	OUTPUTS
RELAYS	
PRESS ↵ ENTER TO VIEW RELAYS	


Pressing the Page Down F3 button shows the 1st four Relays:

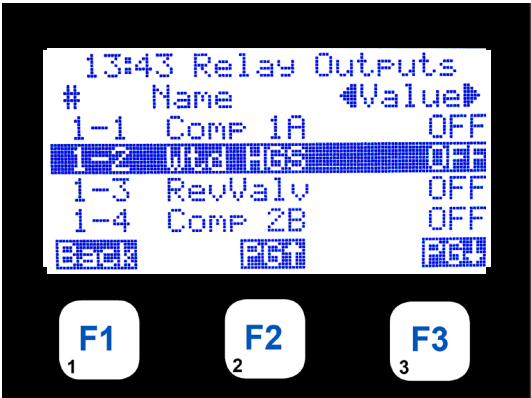

HH:MM RELAY OUTPUTS

#	NAME	VALUE
THE 1ST FOUR RELAY OUTPUTS ARE PRESENTED		
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE DATA FUNCTION		
KEY F1 ALLOWS THE USER GO BACK TO OUTPUTS		
PAGE UP / DOWN DISPLAYS NEXT 4 RELAYS INPUTS		


Pressing the Page Down F3 button shows the next four Relays:

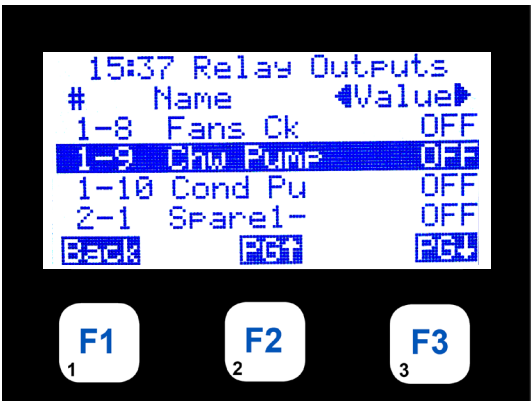

HH:MM RELAY OUTPUTS

#	NAME	VALUE
THE NEXTFOUR RELAY OUTPUTS ARE PRESENTED		
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE DATA FUNCTION		
KEY F1 ALLOWS THE USER GO BACK TO OUTPUTS		
PAGE UP / DOWN DISPLAYS NEXT 4 RELAYS INPUTS		

18. Outputs-Analog

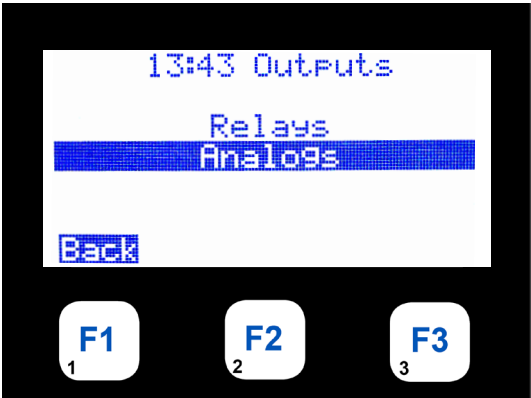


HH:MM

OUTPUTS

ANALOGS


PRESS ← ENTER TO ANALOGS

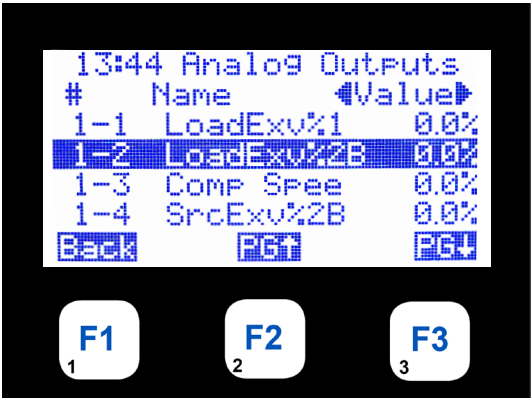

HH:MM ANALOG OUTPUTS

#	NAME	VALUE
THE 1ST FOUR ANALOG OUTPUTS ARE PRESENTED		
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE DATA FUNCTION		
KEY F1 ALLOWS THE USER TO DISPLAY ANALOG OUTPUTS		
PAGE UP / DOWN DISPLAYS NEXT 4 ANALOG INPUTS		



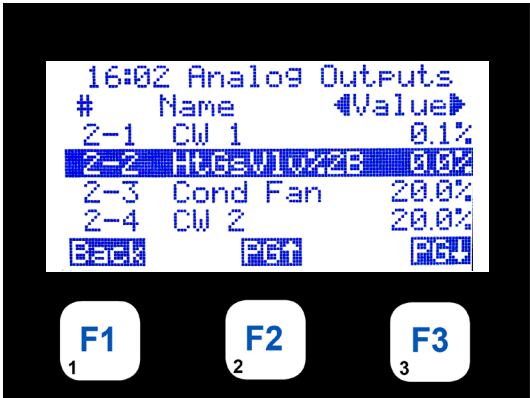


**DESCRIPTION**

HH:MM ANALOG OUTPUTS

#	NAME	VALUE
THE NEXT FOUR ANALOG OUTPUTS ARE PRESENTED		
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE DATA FUNCTION		
KEY F1 ALLOWS THE USER GO BACK		
PAGE UP / DOWN DISPLAYS NEXT 4 ANALOG INPUTS		

19. **SENSORS**

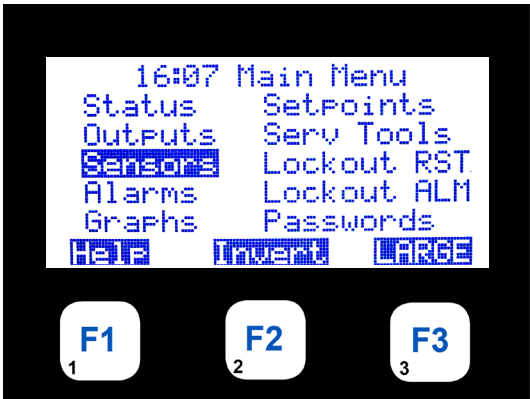


HH:MM MAIN MENU

SENSORS

PRESS MENU KEY TO VIEW SENSORS

PRESS ← ENTER


Selecting the 'Sensors' menu option shows the first 4 Sensors:

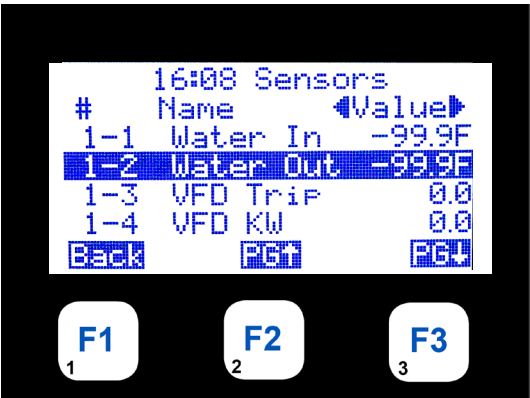

HH:MM SENSORS

#	NAME	VALUE
THE 1ST FOUR SENSORS ARE PRESENTED		
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE DATA FUNCTION		
KEY F1 ALLOWS THE USER TO RETURN TO SENSORS		
PRESS ← MENU TO RETURN TO MAIN MENU		


Continue pressing the Page Down or Page Up buttons to scroll through all the Sensor screens:

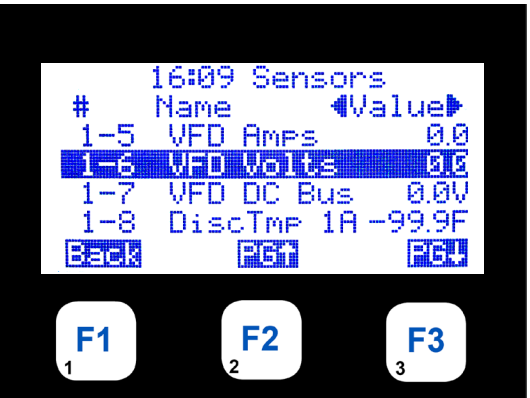

HH:MM SENSORS

#	NAME	VALUE
THE NEXT FOUR SENSORS ARE PRESENTED		
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE DATA FUNCTION		
KEY F1 ALLOWS THE USER TO RETURN TO SENSORS		
PRESS ← MENU TO RETURN TO MAIN MENU		


Press ↵ Enter key to change value of setpoint 1:

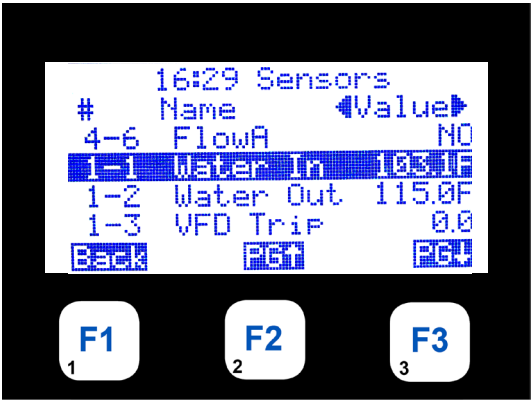

DESCRIPTION


HH:MM	SENSORS	
#	NAME	◀ VALUE ▶
SETPOINT 1-1 VALUE SHOWN		
SETPOINTS VALUES CAN BE CHANGED		
BASED ON AUTHORIZATION LEVEL		
PRESS ↵ ENTER KEY TO CHANGE VALUE		

Change made with proper authorization:

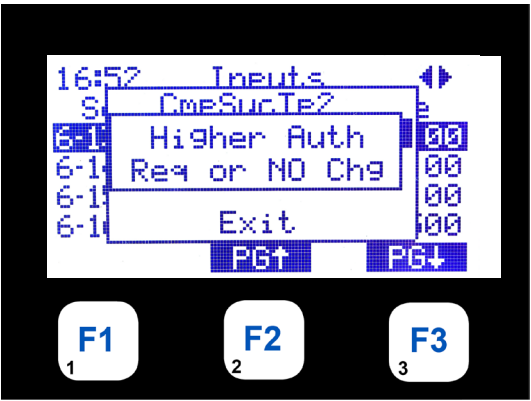


HH:MM
NEXT SCREEN SHOWS HIGHER AUTH NEEDED TO CHANGE VALUE
PRESS ↵ ENTER TO RETURN TO SENSORS OR PRESS MENU TO ENTER PASSWORDS TO CHANGE TO HIGHER AUTHORIZATION

20. ALARMS

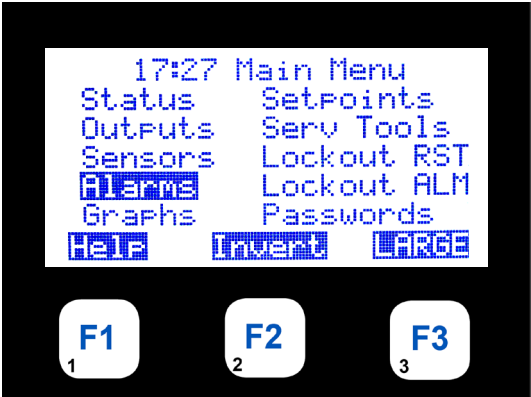


HH:MM MAIN MENU
ALARMS
MENU KEY, SELECT ALARMS ↵ ENTER
THIS WILL ALLOW USER TO DISPLAY DETAILS OF THE ALARMS
THERE ARE A MAXIMUM OF 100 ALARMS
PRESENTED TWO TO A SCREEN WITH MOST CURRENT FIRST

Selecting the 'Alarms' menu option shows the first 2 alarms:

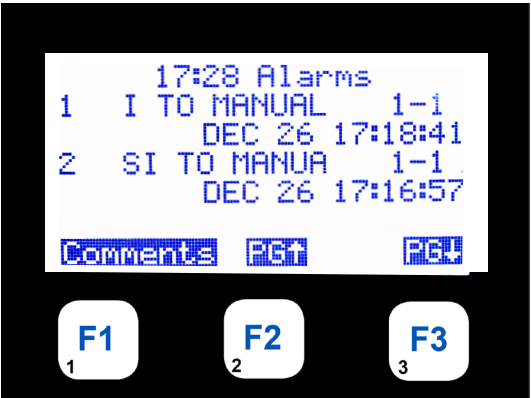

HH:MM ALARMS
THE FIRST TWO ALARMS ARE PRESENTED
↕↑ ALLOWS THE USER TO SCROLL THROUGH THE ALARMS
PAGE UP / DOWN DISPLAYS NEXT ALARMS

## 21. GRAPHS

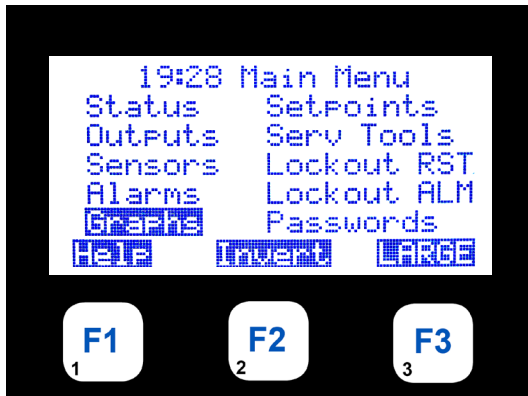


### DESCRIPTION

HH:MM MAIN MENU

GRAPHS

MENU KEY, SELECT GRAPHS, PRESS (↵) ENTER  
THIS WILL ALLOW USER TO DISPLAY DETAILS OF A GRAPH  
ONE ITEM IS GRAPHED AT A TIME  
IT WILL BE PLOTTED IN REAL TIME


Selecting the 'Graphs' menu option shows the following:

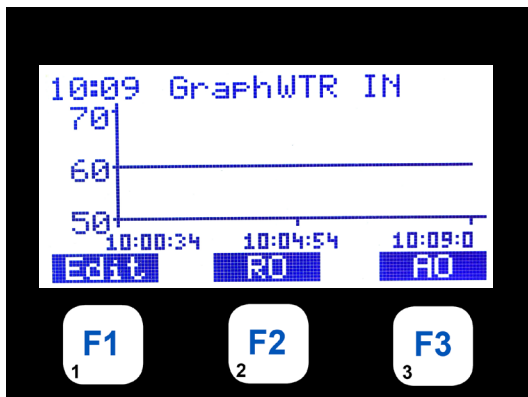

HH:MM

MENU KEY, SELECT GRAPHS, PRESS (↵) ENTER  
THIS WILL ALLOW USER TO DISPLAY DETAILS OF A GRAPH  
ONE ITEM IS GRAPHED AT A TIME  
IT WILL BE PLOTTED IN REAL TIME


Press ↵ Enter key to change Sample Rate - you must be authorized to make this change:

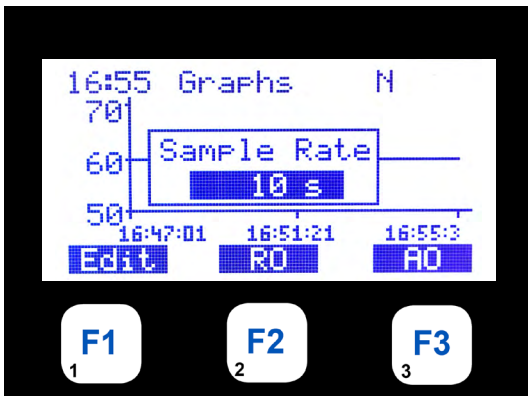

HH:MM GRAPHS

PRESSING F1 "EDIT" BRINGS UP THIS DISPLAY  
WITH CURRENT VALUE HIGHLIGHTED  
PRESS THE ↵ ENTER KEY  
USING ↑↓ ADJUST THE SAMPLE RATE


Next Screen shows change made with proper authorization

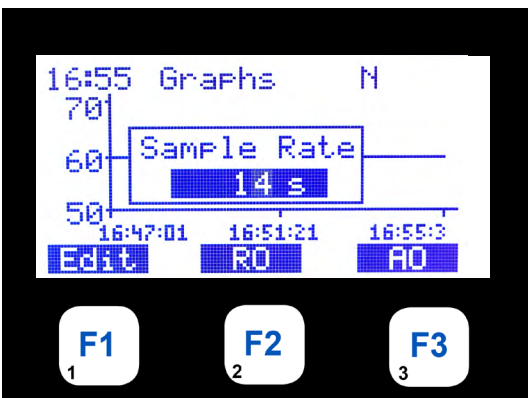

HH:MM GRAPHS

ONCE THE SAMPLE RATE IS CORRECT  
PRESS THE ↵ ENTER KEY  
NOTE YOU MUST BE AUTHORIZED TO MAKE THE CHANGE

Change made to sample rate

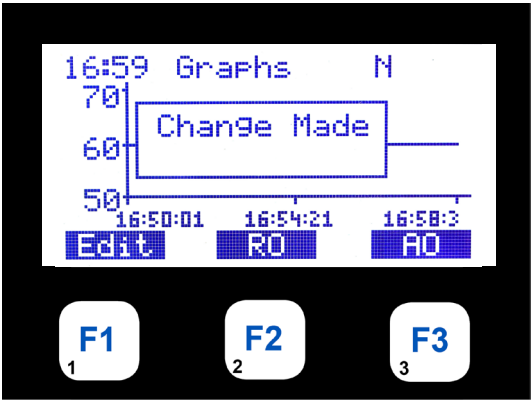


DESCRIPTION

HH:MM GRAPHS

NEW SAMPLE RATE HAS BEEN MADE  
PRESS THE ↵ ENTER KEY  
PRESS ↵ MENU TO RETURN TO MAIN MENU


22. SERV TOOLS

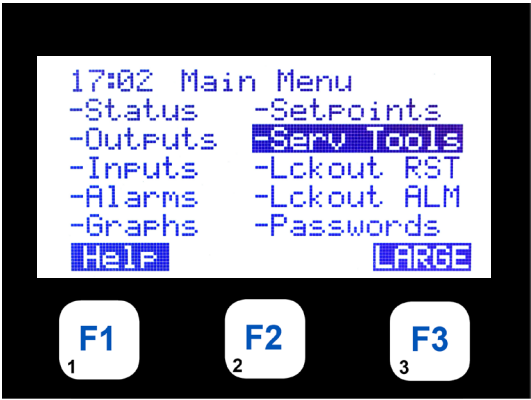

HH:MM MAIN MENU

MENU KEY, SELECT SERV TOOLS, PRESS (↵) ENTER  
THIS WILL ALLOW USER TO DISPLAY  
DETAILS OF SERV TOOLS


Pressing the down arrow shows the rest of the submenu options:

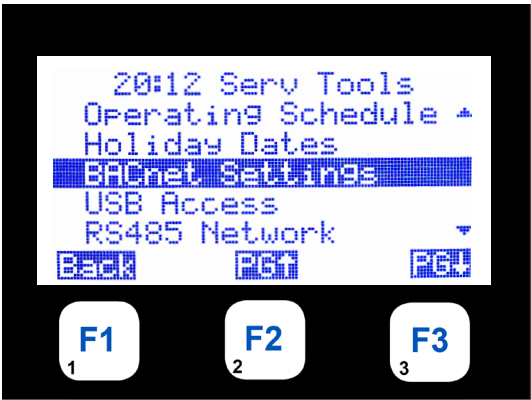

HH:MM SERV TOOLS-BACNET SETTING

THE SERV TOOL OPTIONS ARE DISPLAYED  
↑ ↓ KEYS ALLOW THE USER TO SCROLL  
THROUGH THE OPTIONS  
FUNCTION KEYS ALLOW PAGE UP/DOWN  
PRESS ↓ PG DOWN SELECT SYSTEM INFO

Pressing the down arrow shows the rest of the submenu options:

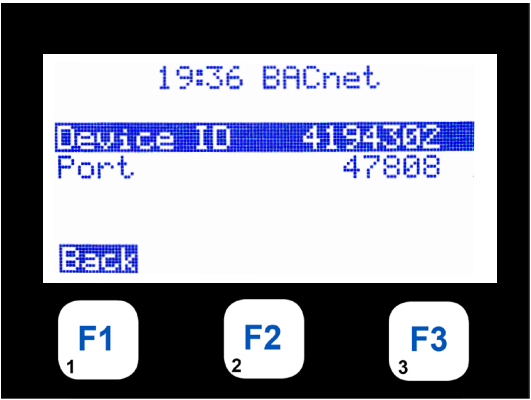


HH:MM BACNET

SELECT SYSTEM INFO - BACNET ADDRESS  
PRESS (↵) ENTER TO SELECT  
FUNCTION KEYS ALLOW PAGE UP/DOWN




Pressing the down arrow shows the rest of the submenu options:

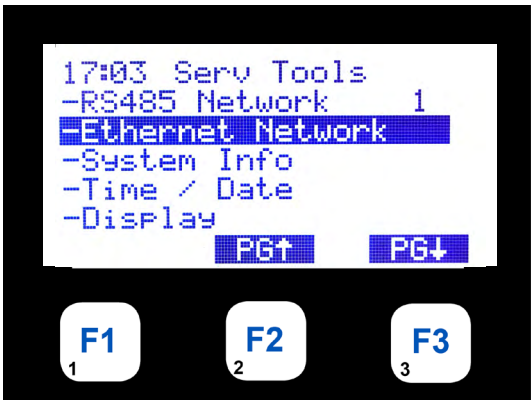

DESCRIPTION

HH:MM SERV TOOLS  
SELECT SYSTEM INFO - ETHERNET NETWORK  
PRESS (↵) ENTER TO SELECT  
FUNCTION KEYS ALLOW PAGE UP/DOWN


Pressing the down arrow shows the rest of the submenu options:

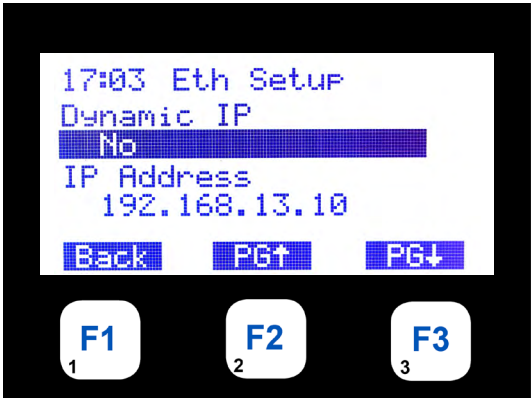

HH:MM ETH SETUP

SCREEN SHOWS ETHERNET SETUP  
DYNAMIC IP  
& IP ADDRESS SETTING  
PRESS ↓ PG DOWN CONTINUES NEXT SERV TOOLS


Pressing the down arrow shows the rest of the submenu options:

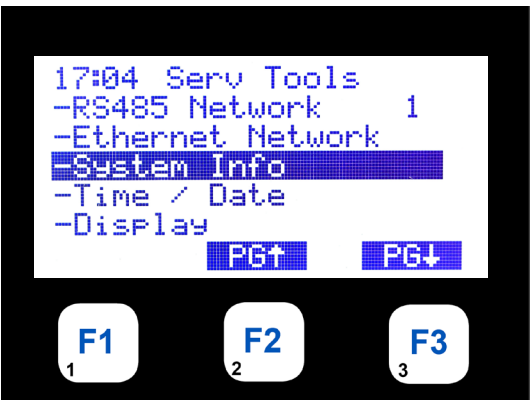

HH:MM SERV TOOLS

SYSTEM INFO  
PRESS↵ENTER KEY TO SELECT


Pressing the down arrow shows the rest of the submenu options:

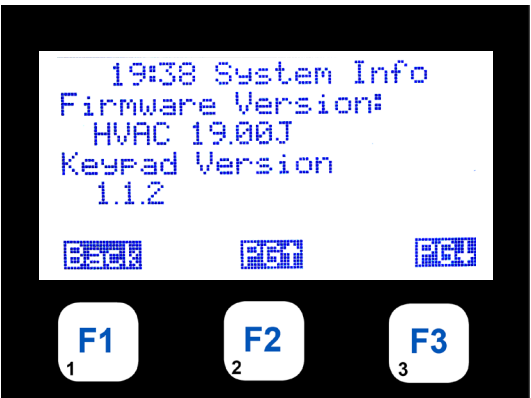

HH:MM SYSTEM INFO


SHOWS FIRMWARE VERSION  
& CONFIG NAME  
PG ↓ CONTINUES TO NEXT SYSTEM INFO

Pressing the down arrow shows the rest of the submenu options:

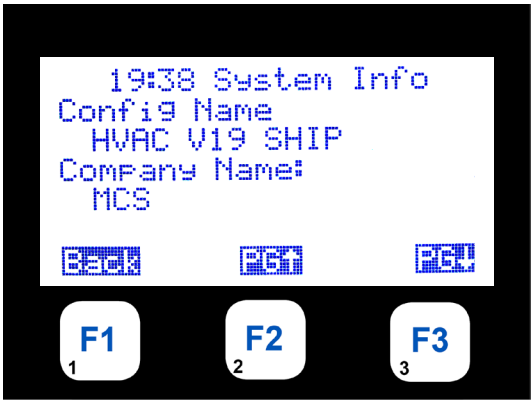


DESCRIPTION


HH:MM SYSTEM INFO  
SHOWS CONFIG VERSION NUMBER  
& CONFIG DATE  
PG ↓ CONTINUES TO NEXT SYSTEM INFO OR  
PRESS ← MENU TO RETURN TO MAIN MENU

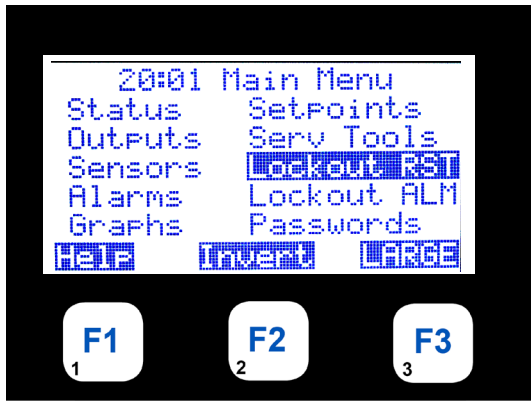

HH:MM MAIN MENU  
MENU KEY, SELECT LCKOUT RST  
← ENTER KEY  
THIS WILL ALLOW USED TO  
DISPLAY ANY LOCKOUTS

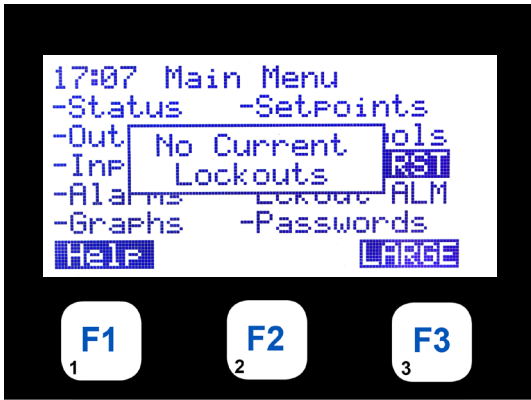


HH:MM MAIN MENU  
IF NO LOCKOUTS EXIST YOU WILL BE NOTIFIED  
IF THE UNIT IS IN LOCKOUT YOU WILL BE ALLOWED TO RESET.  
YOU ARE LIMITED TO 10 RESETS A DAY  
MAKE SURE THE CAUSE OF THE RESET IS FIXED  
BEFORE TRYING AGAIN

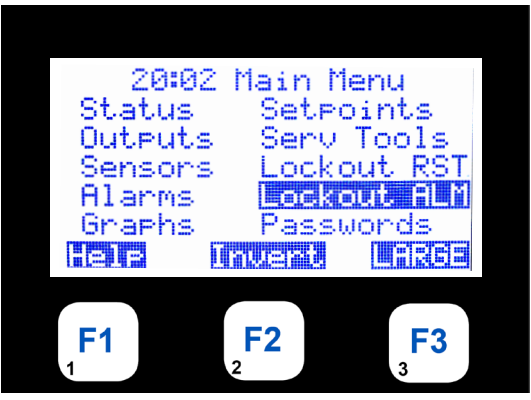

HH:MM MAIN MENU  
MENU KEY, SELECT LCKOUT ALARMS, PRESS (←) ENTER  
THIS WILL ALLOW USER TO  
DISPLAY ANY LOCKOUTS ALARMS


Selecting the 'Lckout ALM' menu option shows the first 2 Lockout alarms:

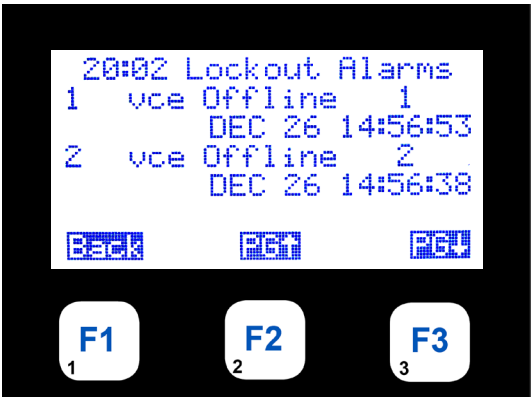

DESCRIPTION
HH:MM LOCKOUT ALARMS
SYSTEM INFO LOCKOUT ALARM


23. Passwords - Numerical

Selecting the 'Passwords' option shows the following:  
Enter your Password by using the number keys, F1, F2, etc. An astrick will appear - passwords are 4 Numeric numbers  
Entering the incorrect password will keep the system in the 'View mode' until the correct password is entered:  
Using the Keypad keys enter your numerical code:

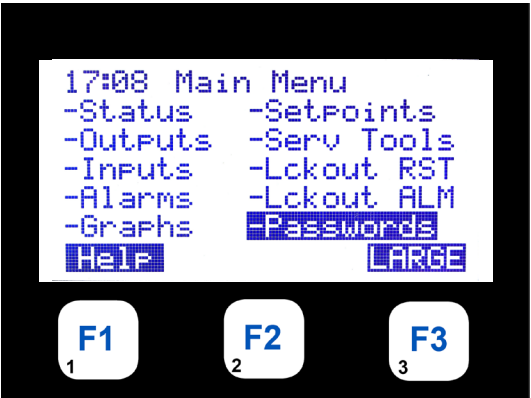


HH:MM MAIN MENU
MENU KEY, SELECT PASSWORD, PRESS (←) ENTER
THIS WILL ALLOW USER TO GET AUTHORIZED

Entering the incorrect password will keep the system in the 'View mode' until the correct password is entered:

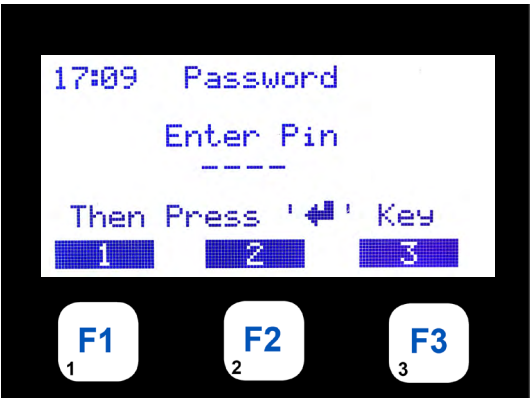

HH:MM PASSWORD
ENTER YOUR 4 DIGIT PASSWORD
ALPHA OR NUMERICAL CAN BE USED
ENTER FROM KEYPAD
CAN BE ANY COMBINATION FROM LAPTOP

If correct password is entered screen will shown correct authorization:

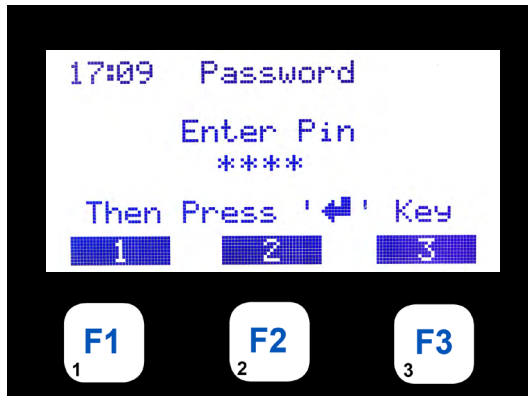

#### DESCRIPTION


HH:MM PASSWORD  
AS EACH DIGIT IS ENTERED AN (\*) ASTERICK SHOWS  
UP ON DISPLAY  
WHEN COMPLETED PRESS ENTER (↵)

Screen shows correct password entered for 'Factory Authorization':



HH:MM PASSWORD  
IF AN INCORRECT PASSWORD IS ENTERED  
YOU WILL BE NOTIFIED AT WHAT  
LEVEL YOU ARE AUTHORIZED  
PRESS ENTER (↵)

Entering the incorrect password will keep the system in the 'View mode' until the correct password is entered:

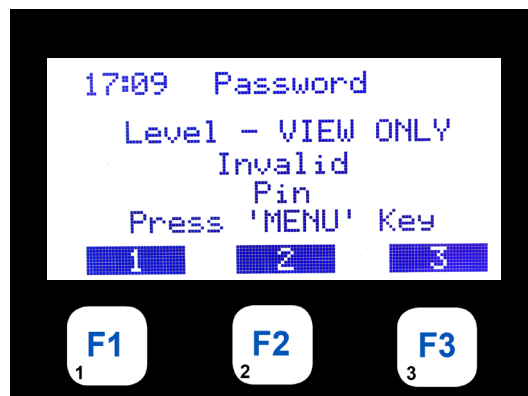


HH:MM PASSWORD  
INVALID PIN WAS ENTERED,  
THE SYSTEM WILL MOVE TO "VIEW ONLY"  
UNTIL THE CORRECT PASSWORD IS ENTERED

24. Passwords - ALPHA / NUMERICAL


Selecting the 'Passwords' option shows the following:  
Click on Passwords to enter your ALPHA / NUMERICAL password:

Press the F1 key activates the ALPHA / NUMERICAL control, begin entering your password:

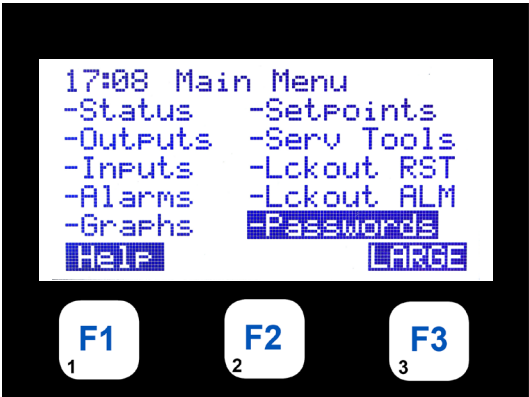


DESCRIPTION

HH:MM	MAIN MENU
MENU KEY, SELECT PASSWORD, PRESS (←) ENTER	
THIS WILL ALLOW USER TO GET AUTHORIZED	

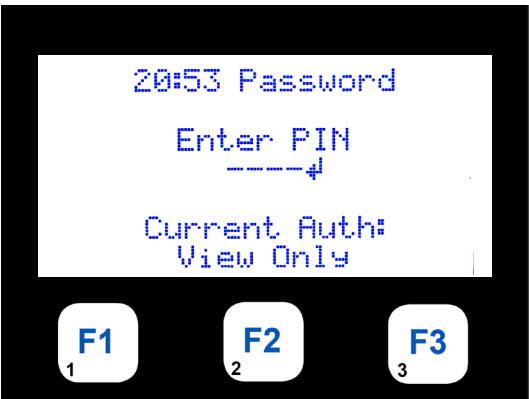


HH:MM	PASSWORD
PRESS F1 KEY TO ACTIVE ALPHA/NUMERICAL	
ALPHA OR NUMERICAL CAN BE USED	
ENTER FROM KEYPAD	
CAN BE ANY COMBINATION	

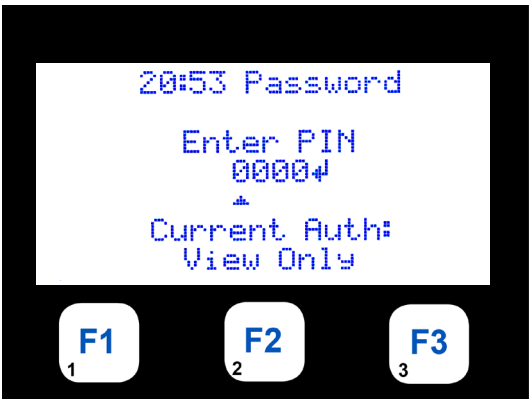

HH:MM	PASSWORD
SCREEN SHOWS 1ST POSITION WITH UP ▲ ARROW UP ON DISPLAY	
USING THE UP ▲ ARROW OR DOWN ▼ ARROW	
SCROLL NUMBERS OR APHA LETTERS TO ENTER	
YOUR 1ST LETTER / NUMBER	
USE THE (→) RIGHT ARROW TO MOVE TO THE 2ND POSITION	
AND 3RD, 4TH POSITONS	



Enter the 1st '**ALPHA/NUUERICAL**' letter or number until the correct password is entered:

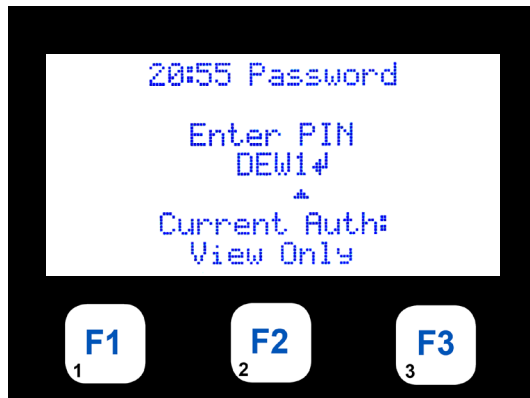

#### DESCRIPTION

HH:MM PASSWORD  
PIN ENTERED  
CLICK ON ENTER ↵ TAB  
YOU WILL BE NOTIFIED AT WHAT  
LEVEL YOU ARE AUTHORIZED  
PRESS ENTER (↵)


When all positions are filled, click on the (↵) enter tab on the keypad



HH:MM PASSWORD  
AUTH SUCCESS!  
SET TO 'FACTORY'  
CLICK ON (↵) ENTER  
PRESS ↵ MENU TO RETURN TO MAIN MENU

WIFI SETUP


1. MAIN MENU

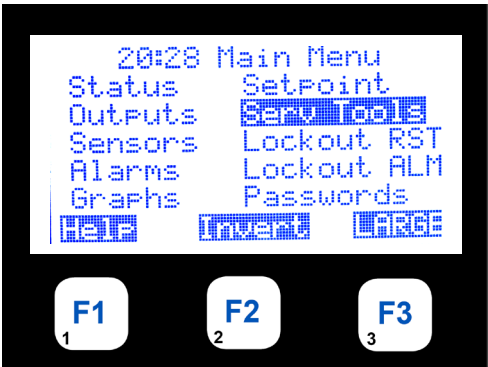

DESCRIPTION


HH:MM	MAIN MENU
MENU KEY, SELECT SERV TOOLS, PRESS (↵) ENTER THIS WILL ALLOW USER TO DISPLAY DETAILS OF SERV TOOLS	

2. Wi-Fi Network

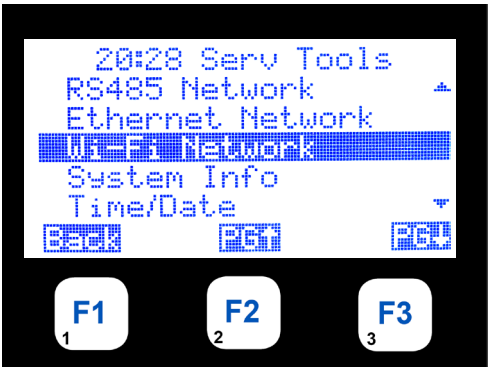

HH:MM	SERV TOOLS
WIFI NETWORK	
BACK	PG UP↑ PG DOWN↓

3. ENTER PASSWORD

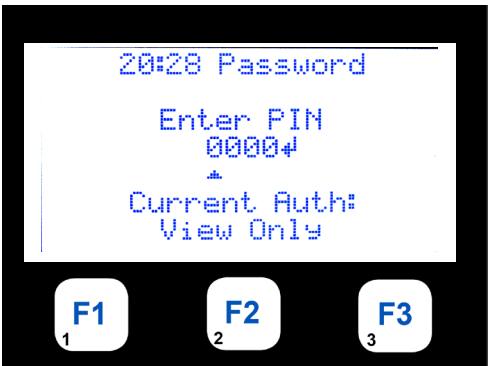


HH:MM	PASSWORD
ENTER PIN	
CURRENT AUTH: VIEW ONLY	

4. AUTH SUCCESS




HH:MM	CONTROL ON
DISPLAY SHOWS LARGE TYPE OF STATUS WINDOW	

5. Wi-Fi Setup Screen

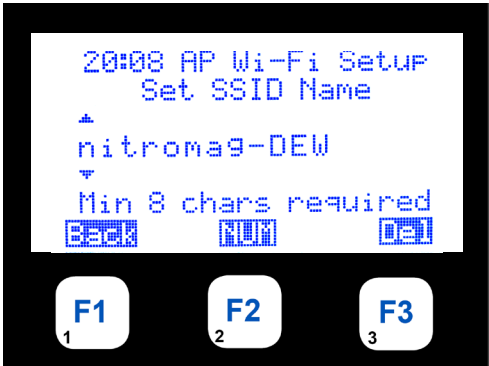


DESCRIPTION

HH:MM	AP WIFI SETUP	
	SET SSID NAME	
	NAME	
	MIN 8 CHARS REQUIRED	
BACK	NUM	DEL

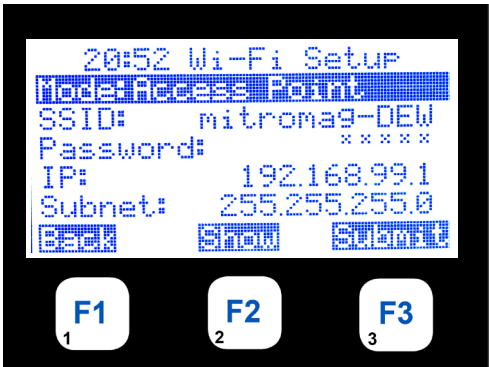

HH:MM	WI-FI SETUP	
MODE: ACCESS POINT		
SSID: NAME FOR WIFI		
PASSWORD XXXXX		
IP: ADDRESS		
SUBMIT: 255.255.255.0		
BACK	SHOW	SUBMIT

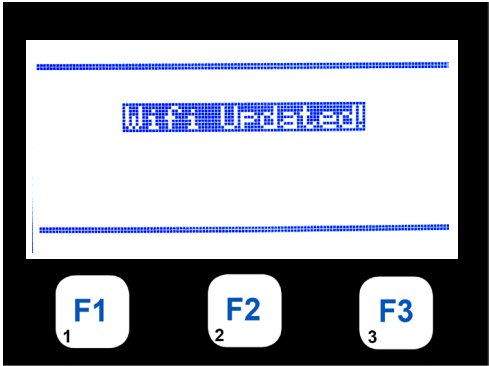


WIFI UPDATED
--------------

BACKUP / RESTORE FILES USING USB DRIVE

The display screens shown on the following pages show how to use the 'BACKUP/RESTORE' utility in the 'SERV TOOLS'.


To reach the Main Menu press the Menu button after powering up. Based on the highlighted menu option when the enter key (↵) is pressed will bring up one of the following screens.

1. Menu Key - Pressing the 'Menu' key shows the following:

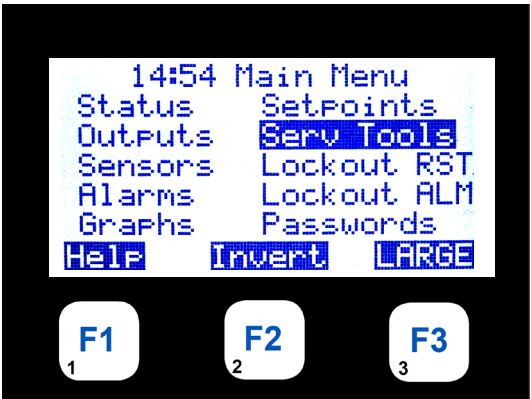


DESCRIPTION	
HH:MM	MAIN MENU
MENU KEY, SELECT SERV TOOLS, PRESS (↵) ENTER	
THIS WILL ALLOW USER TO DISPLAY	
DETAILS OF SERV TOOLS	
← → ↓ ↑ KEYS ALLOW THE USER TO SCROLL THROUGH THE	
DATA FUNCTION	
KEY F1 ALLOWS THE USER TO ACCESS HELP MENU	
PRESS ↵ MENU TO RETURN TO MAIN MENU	

2. USB DRIVE INSERTED - Click on /media/USB DRIVE

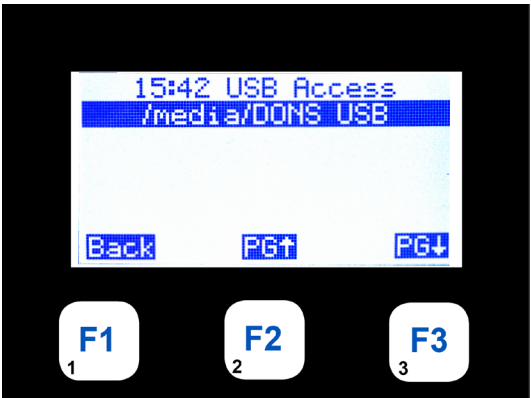


HH:MM	USB ACCESS /MEDIA/BONS USB	
BACK	PG↑	PG↓

3. Click on Backups

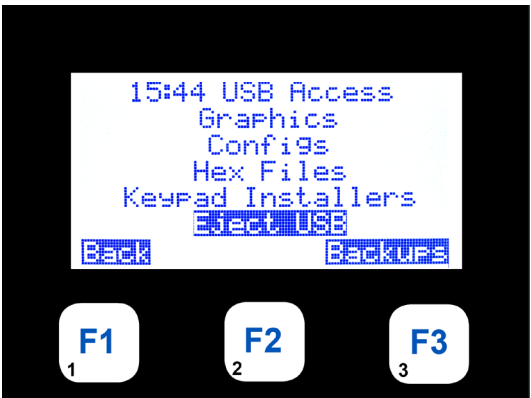

HH:MM	USB ACCESS GRAPHICS CONFIGS HEX FILES KEYPAD INSTALLERS EJECT USB	
BACK		BACKUPS


4. Click to ‘Create New Backup’

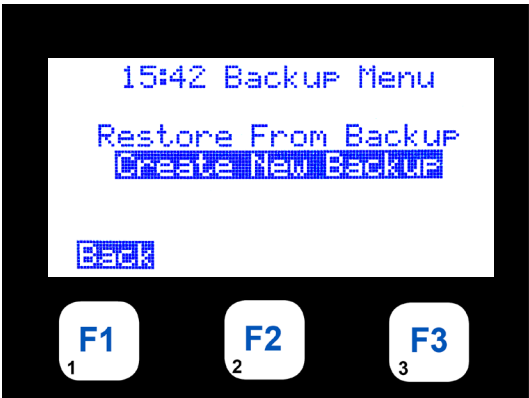

DESCRIPTION


HH:MM	BACKUP MENU
	Restore From Backup
	Create new Backup
Back	

5. Click to start Backup

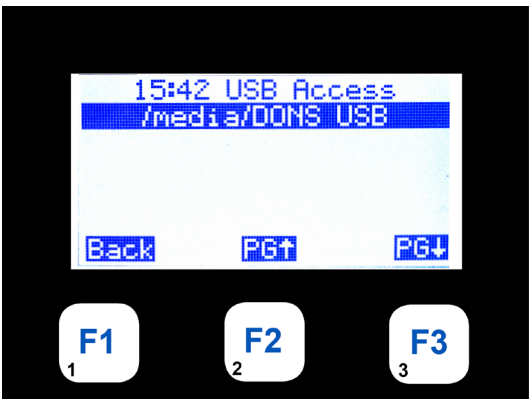


HH:MM	USB ACCESS /MEDIA/BONS USB	
BACK	PG↑	PG↓

6. Backup Complete!

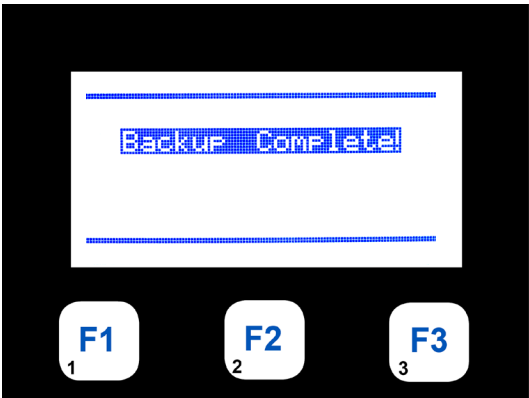

HH:MM	BACKUP COMPLETE!
-------	------------------

7. Date of Backup on disk

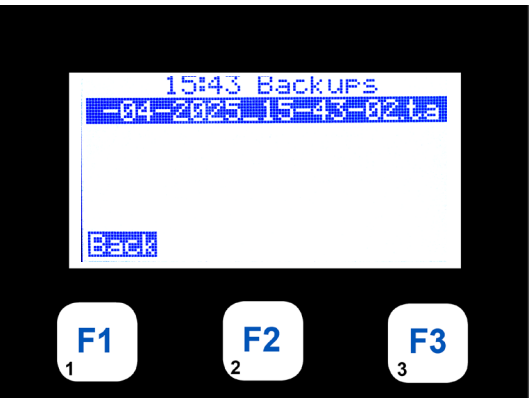

HH:MM	BACKUPS DATE OF BACKUP
BACK	


8. Click to ‘Restore’



DESCRIPTION


HH:MM	BACKUP MENU
	Restore From Backup
	Create new Backup
Back	

9. Click to start Backup

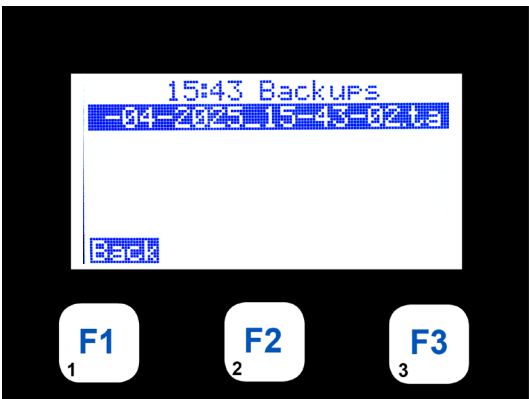


HH:MM	BACKUPS
	DATE OF BACKUP
BACK	

10. Restore Done!

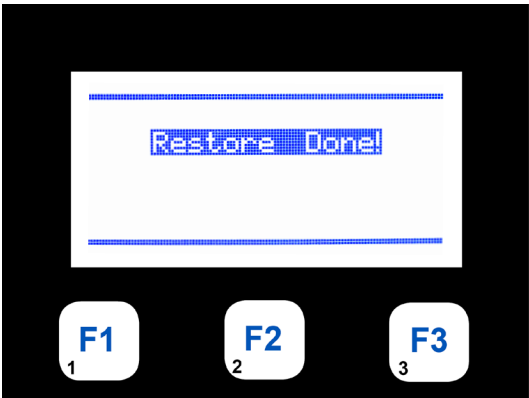

HH:MM	RESTORE DONE!
-------	---------------

11. Eject USB Drive

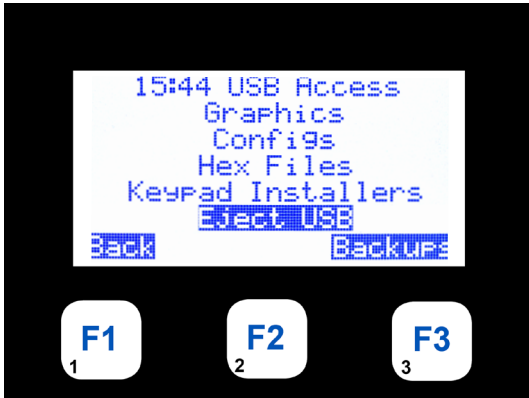


HHH:MM	USB ACCESS
	GRAPHICS
	CONFIGS
	HEX FILES
	KEYPAD INSTALLERS
	EJECT USB
BACK	BACKUPS



MAIN MENU FUNCTION KEYS


12. MAIN MENU

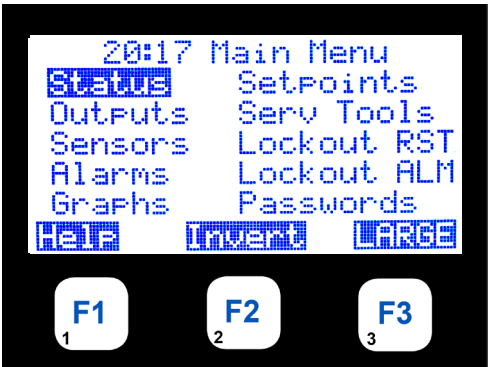

DESCRIPTION


HH:MM	MAIN MENU
	PRESS MENU KEY
	F1 KEY FOR HELP
	PRESS ↵ ENTER

13. HELP DISPLAY

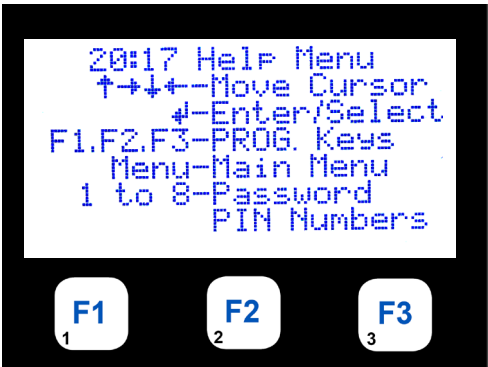


HH:MM	HELP MENU
	DESCRIPTION OF THE SYMBOLS USED
	TO MOVE CURSOR
	& KEYS USED TO ENTER PASSWORD

14. LARGE TYPE DISPLAY

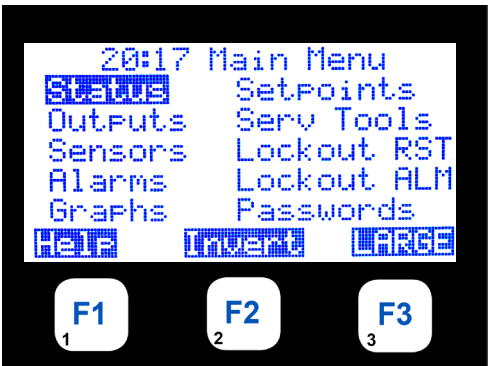

HH:MM	MAIN MENU
	PRESS F3 KEY AT MAIN MENU

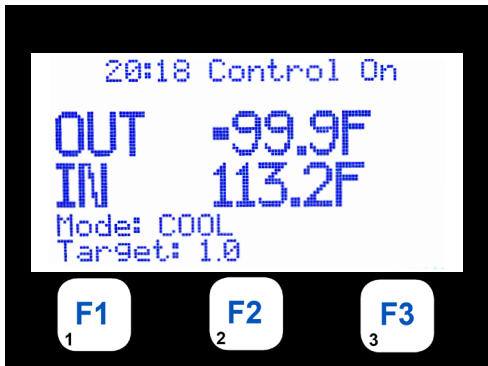

HH:MM	CONTROL ON
	DISPLAY SHOWS LARGE TYPE
	OF STATUS WINDOW

## AUTHORIZATION FUNCTION

The authorization code is a special four-character code (Alpha or Numeric) that enables access in to the MCS-NitroMag system.

If the MCS-NitroMag is being accessed through MCS-Connect, the code may consist of any valid alpha/numeric characters. Each MCS-NitroMag can have up to 15 different authorization codes. There are four levels of authorization, which provide different capabilities within the system. The authorization codes cannot be viewed in a MCS-NitroMag system. These are established when building the configuration file in MCS-NitroMag Config.

From the Keypad/Display the following changes can be made based upon the authorization level:

FUNCTION	VIEW	USER	SERVICE	SUPERVISOR	FACTORY	ADMIN
Sensor offsets	NO	NO	YES	YES	YES	YES
Sensor diagnostics	NO	NO	YES	YES	YES	YES
Date and time set	YES	YES	YES	YES	YES	YES
Day of week set	YES	YES	YES	YES	YES	YES
Change No Flow Lockout or shut down	NO	NO	NO	NO	YES	YES
Change rotate Yes or No	NO	NO	NO	NO	YES	YES
Change Manual/Auto settings	NO	NO	NO	YES	YES	YES
Change setpoint values	*	*	*	*	YES	YES
Change operating schedules	NO	YES	YES	YES	YES	YES
Change holiday dates	NO	YES	YES	YES	YES	YES
Lockout Reset	**	**	**	**	YES	YES
Change RS485 network settings	NO	NO	YES	YES	YES	YES
Change Ethernet network settings	NO	YES	YES	YES	YES	YES
Adjust Keypad/Display contrast	YES	YES	YES	YES	YES	YES

\* Setpoints may have individual authorization levels; you must have the proper authorization to view or edit them.

The number of lockout reset per day is limited. NUC-MAGNUM-V17 configuration defines the number of reset per day and what level of authorization is allow to bypass the limit of reset per day.

PAGE LEFT BLANK

PAGE LEFT BLANK



*Providing HVAC/R Control Solutions Worldwide*

5580 Enterprise Pkwy. Fort Myers, FL 33905

Office: (239) 694-0089

Fax: (239) 694-0031

[www.mcscontrols.com](http://www.mcscontrols.com)